

Model C390

<i>Function</i>	<i>Format</i>	<i>Address Hex</i>	<i>Data Hex</i>	<i>Address Dec</i>	<i>Data Dec</i>	<i>Comment</i>
Balanced Input	NEC	877C	2E	34684	46	
Cursor Down	NEC	877C	28	34684	40	
Cursor Left	NEC	877C	29	34684	41	
Cursor Right	NEC	877C	2A	34684	42	
Cursor Up	NEC	877C	27	34684	39	
Dimmer	NEC	877C	38	34684	56	
Display	NEC	877C	26	34684	38	
Enter	NEC	877C	32	34684	50	
EQ	NEC	877C	C9	34684	201	
Front	NEC	877C	85	34684	133	
HDMI 1	NEC	877C	89	34684	137	
HDMI 2	NEC	877C	9B	34684	155	
HDMI 3	NEC	877C	8D	34684	141	
Input 1	NEC	877C	C2	34684	194	
Input 2	NEC	877C	C0	34684	192	
Input 3	NEC	877C	C1	34684	193	
Input 4	NEC	877C	30	34684	48	
Input 5	NEC	877C	31	34684	49	
Input 6	NEC	877C	1E	34684	30	
Input 7	NEC	877C	60	34684	96	
MDC 3	NEC	877C	80	34684	128	
Menu	NEC	877C	7F	34684	127	
Mute	NEC	877C	94	34684	148	
Off	NEC	877C	C8	34684	200	
On	NEC	877C	25	34684	37	
Phono	NEC	877C	F7	34684	247	
Single-Ended Input	NEC	877C	91	34684	145	
Sleep	NEC	877C	20	34684	32	
Source Down	NEC	877C	1D	34684	29	
Source Up	NEC	877C	1A	34684	26	
Tone	NEC	877C	39	34684	57	
Volume Down	NEC	877C	8C	34684	140	
Volume Up	NEC	877C	88	34684	136	