



Here is my Amp.

1. If I close SW1 on my power bar I DON'T HAVE A TURN-OFF THUMP AT MY SPEAKER.
2. If I close SW2 (BACK OF MY AMP) I GET A TURN-OFF THUMP! WHY??