

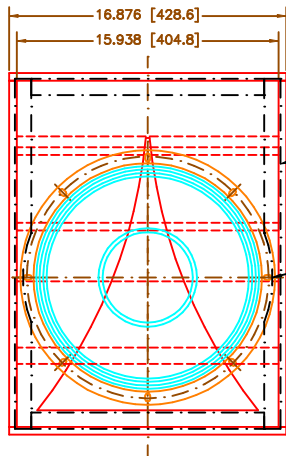
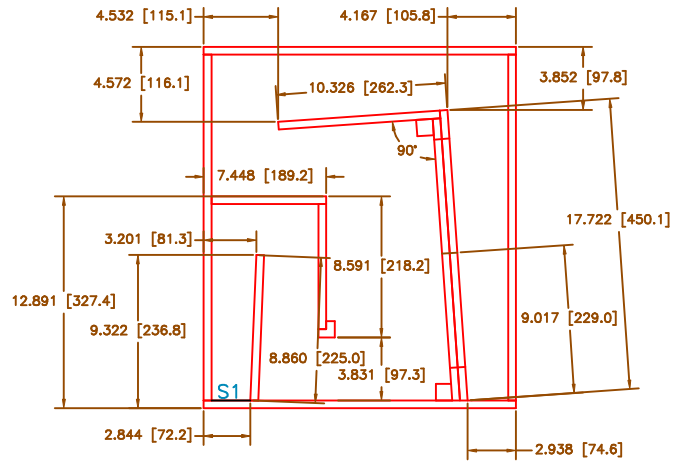
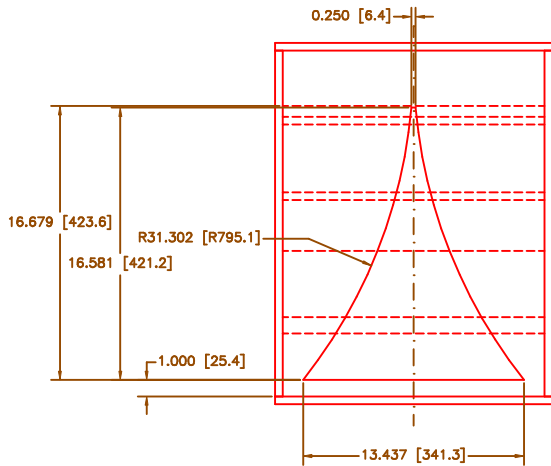
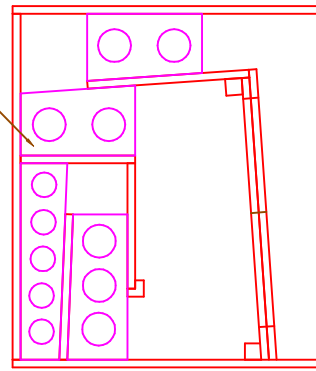



Example offset center braces.

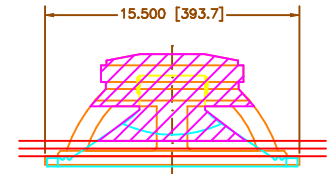

1"x1" Typ. Battens
Relieve battens to allow driver to be tilted into place

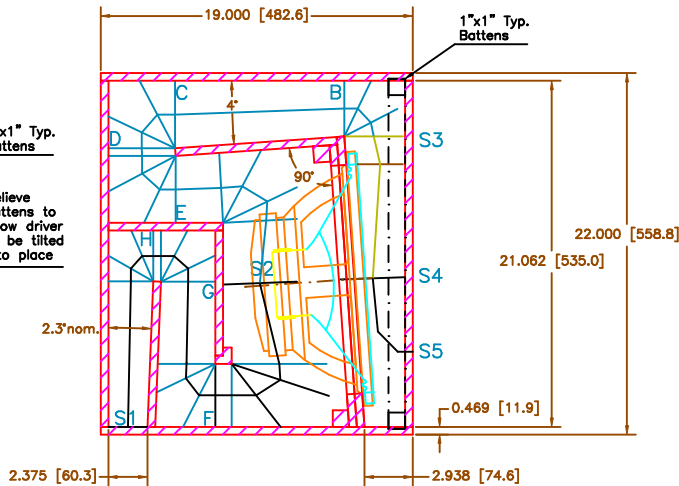

Area=39.456in²[254.55cm²]
(Subtract from gross cross-section
of S2 for net S2 area. Resultant
net duct height is 4.5")

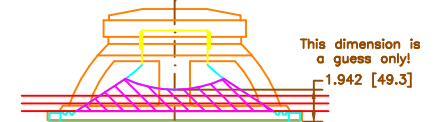

Area=15.083in²[97.31cm²]
(Add to gross cross-section
of S4 for net S4 area.)

This dimension is
a guess only!

Karlson slot area ~82.45in²[531.93cm²]
Material thickness: 1/2"nom. (.469"[11.9mm])

